


MYFIRST

UVLED Lamp

MANUAL GUIDE

PLEASE READ ALL THE SAFETY INSTRUCTIONS BEFORE THE DEVICE OPERATION. KEEP THIS MANUAL GUIDE SAFE FOR FUTURE REFERENCE.

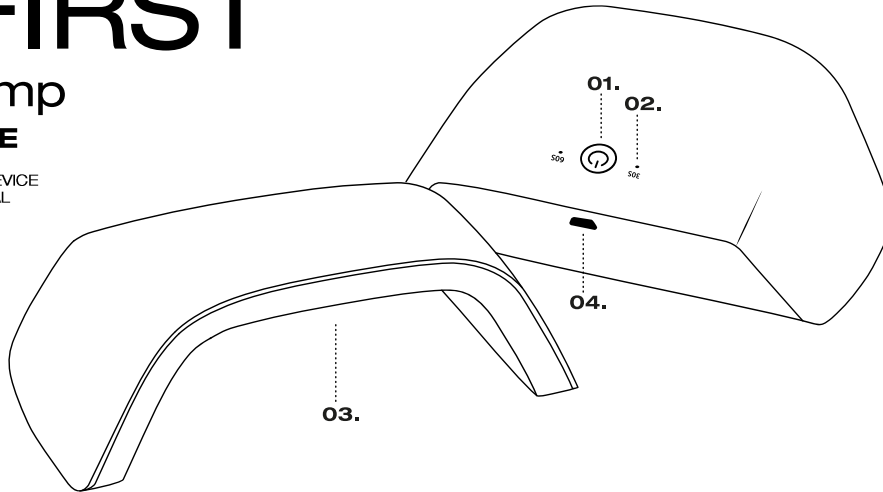

PARTS OF THE UNIT

- 01. Control button
- 02. Indicator light (30/60s)
- 03. UVLED bulbs (15pcs)
- 04. AC adapter socket

SPECIFICATIONS

UV Classification: UV Type 3
 Input: AC 100-240V; 50/60Hz
 Output: DC 5V; 2.0A
 Power: max.12W±10%
 Size: 150*94*54mm
 Weight: 99g±10%

ACCESSORIES

- 1pc AC Adapter.
- 1pc USB cable.

DESCRIPTION

A MyFirst UVLED Lamp is used for the UV- and UVLED light setting artificial nail materials consolidation. With its sleek, cute look and its practical shape it will be a great aid during at home or travelling or for practice. It is developed for gel-lac use. Try it.

OPERATION

ATTENTION! ALWAYS CHECK THE UNIT AND ITS ACCESSORIES JUST CONDITION BEFORE USE.

01. Carefully unpack the unit and its accessories, then choose a stable, even surfaced place for the device use.
02. Connect the Adapter and the USB cable, then connect the other end of the USB cable into the unit (see pic. 04.) then insert the end of the plug into the mains socket till it stops.
03. The device will turn on and will remain in stand by mode, while the 30S indicator light on the device top will start lighting continually (see pic. 02).
Notice: The device will remain in standby mode till the operation start and its under in charge.
04. Select the desired operation time (30/60sec) with the Control button on the device top (see pic. 01). **Notice:** The default setting will start on 30s. For the operation time change, press the Control button on top on the device for a few second (see pic. 01). With this, the device timer will shift to the other timed use without a sound indication. The change will be indicated by the indicator light change (see pic. 02) and the UVLED bulbs will start lighting (see pic. 03). Each time the operation time is changed, the timer counting will start from the beginning and the UVLED bulbs will start to operate (see pic. 03). After the timed use finished, the device will turn off without a sound indication and will remain in stand by mode in the previously adjusted operation time. **Notice:** The operation time can be changed during the device operation.
Note: If the unit becomes too hot during in use, stop the device use for at least 15 minutes. If you experience burning sensation on the nail plate surface during in use (it depends on the applied materials and the sensitivity of the nail), use the unit intermittently or stop the device use.
05. To start the device operation from the stand by mode or stop it during in operation, press shortly once the Control button on the top of the unit (see pic. 01).
 06. When the device use is finished, turn off the unit as following:
 - Stop the device operation according to the 05. point.
 - Remove the USB cable from the device socket (see pic. 04.), from the AC Adapter, then remove the AC adapter from the mains outlet as well.

MAINTENANCE and CLEANING

ATTENTION! DO NOT DISASSEMBLE THE UNIT OR ITS ACCESSORIES! BEFORE THE MAINTENANCE AND CLEANING, ALWAYS MAKE SURE THE UNIT UNPLUGGED STATE ACCORDING TO THE OPERATION 06. CHAPTER. ONLY PROCEED WITH THE MAINTENANCE AND CLEANING AFTER THE UNIT AND ITS UVLED BULBS HAS COOLED DOWN COMPLETELY. BE CAREFUL NOT TO TOUCH THE UNIT UVLED BULBS WITH ANYTHING (E.G.: SKIN, NAILS AND OTHER PROFESSIONAL TOOLS OR MATERIALS). IT IS RECOMMENDED TO WEAR GLOVES DURING THE OPERATION.

TOOLS REQUIRED FOR MAINTENANCE/CLEANING: Soft brush and a non-synthetic dry, clean, soft cloth.

UNIT: Place the unit on a stable, even surface (it is recommended to place a soft cloth under the device). Wipe the device external surface with the soft, dry cloth and clean the hard-to-reach parts with the soft brush. Wipe the external surface again with the soft, dry cloth, and then check the unit proper operation according to **OPERATION 02-05.** chapter.

Notice: In case of stubborn contamination the device external surface can be cleaned with a soft, moist cloth, but pay attention liquids cannot contact with the device inner parts, joints, openings or can be contacted with the device UVLED bulbs or its USB socket (see at pic. 02 - 04), otherwise it can cause damage to the device. At first, place the cleaning material into the cloth, then start the surface cleaning. After the moist cleaning, do not put the device under in charge for at least 1-2min and always wait for its full dry.
 Do not use solvent detergents!

In case of average frequency use, clean the device- and its accessories according to the described above at least once a week.
 If necessary, contact with the place of purchase or with our service department.

Service: Marilynails Ltd., Service (Soroksari street 160., H-1095 Budapest, Hungary).

STORAGE

Always store the device and its accessories indoors in a dry place, away from radiant heat in clean, dry condition. Wind up the unit USB cable loosely together while take care not to break it.
Always make sure the device and its accessories intact condition before the operation.

SAFETY CAUTIONS

01. The device and its accessories can only be used indoors between 0-40°C (32-104°F).
02. The device cannot be used by persons under 18 years of age.
03. Before the device use, always check the unit and its accessories intact state.
04. Use the device only with its original accessories.
05. The switch on device cannot be left unattended.
06. Use/store the device only on a stable, even surface places! Avoid places where the unit may be easily dropped/damaged or accessed by unauthorized persons. Do not use the device as a hand rest.
07. No liquids can get inside the device or into its switches, openings, sockets, also it cannot come into contact with the power cord.
08. Never touch the device or its accessories with wet / damp hands, even when the device is turned off or unplugged.
09. No liquids can get inside the device or into its switches, openings, sockets, also it cannot come into contact with the power cord.
10. Never touch the device or its accessories with wet / damp hands, even when the device is turned off or unplugged.
011. Never operate the device if the unit or its accessories damaged or has fallen into water.
012. Take the device into the place of purchase for inspection.
013. Only authorized persons can repair the device and its accessories: Marilynails Ltd., Service (Soroksari street 160., H-1095 Budapest, Hungary).
014. No foreign objects may enter the device sockets or openings.
015. Do not touch the device UVLED bulbs with anything (see at pic. 03) e.g.: skin, nails or other professional accessories/ materials or water/ cleaning supplies. Otherwise, the UVLED bulbs may suffer damage what will cause decline to their performance and will reduce the device lifetime.
016. Do not look directly into the device light source during in operation (see at pic. 03), as well as do not let the skin to be exposed excessive amount UV radiation. Otherwise, it may cause eye- or skin damage or can suffer premature skin ageing.
017. Some drugs- and cosmetics can increase the sensitivity to the UV radiation. Before the device use remove all cosmetics from the skin surface and make sure do not take- or use any product or medication what can cause- or increase the UV radiation sensitivity.
018. Do not use the device on individuals whom has highly sensitive skin- or has freckle tendencies or suffered from skin cancer before.
019. The device and its accessories may have electric charges in them even when they turned off. After the device use is finished, always anneal it according to the **OPERATION 06.** chapter.

ATTENTION! In case of the device or its accessories failure, visit the place of purchase.
 For more information about the device, visit our website: <http://www.marilynails.com>

Marilynails Ltd. Soroksari street 160., H-1095 Budapest, Hungary